


WTC50M Wiring Diagram


Apply for the following model:

WTC50M

WTC50M-Long Snout

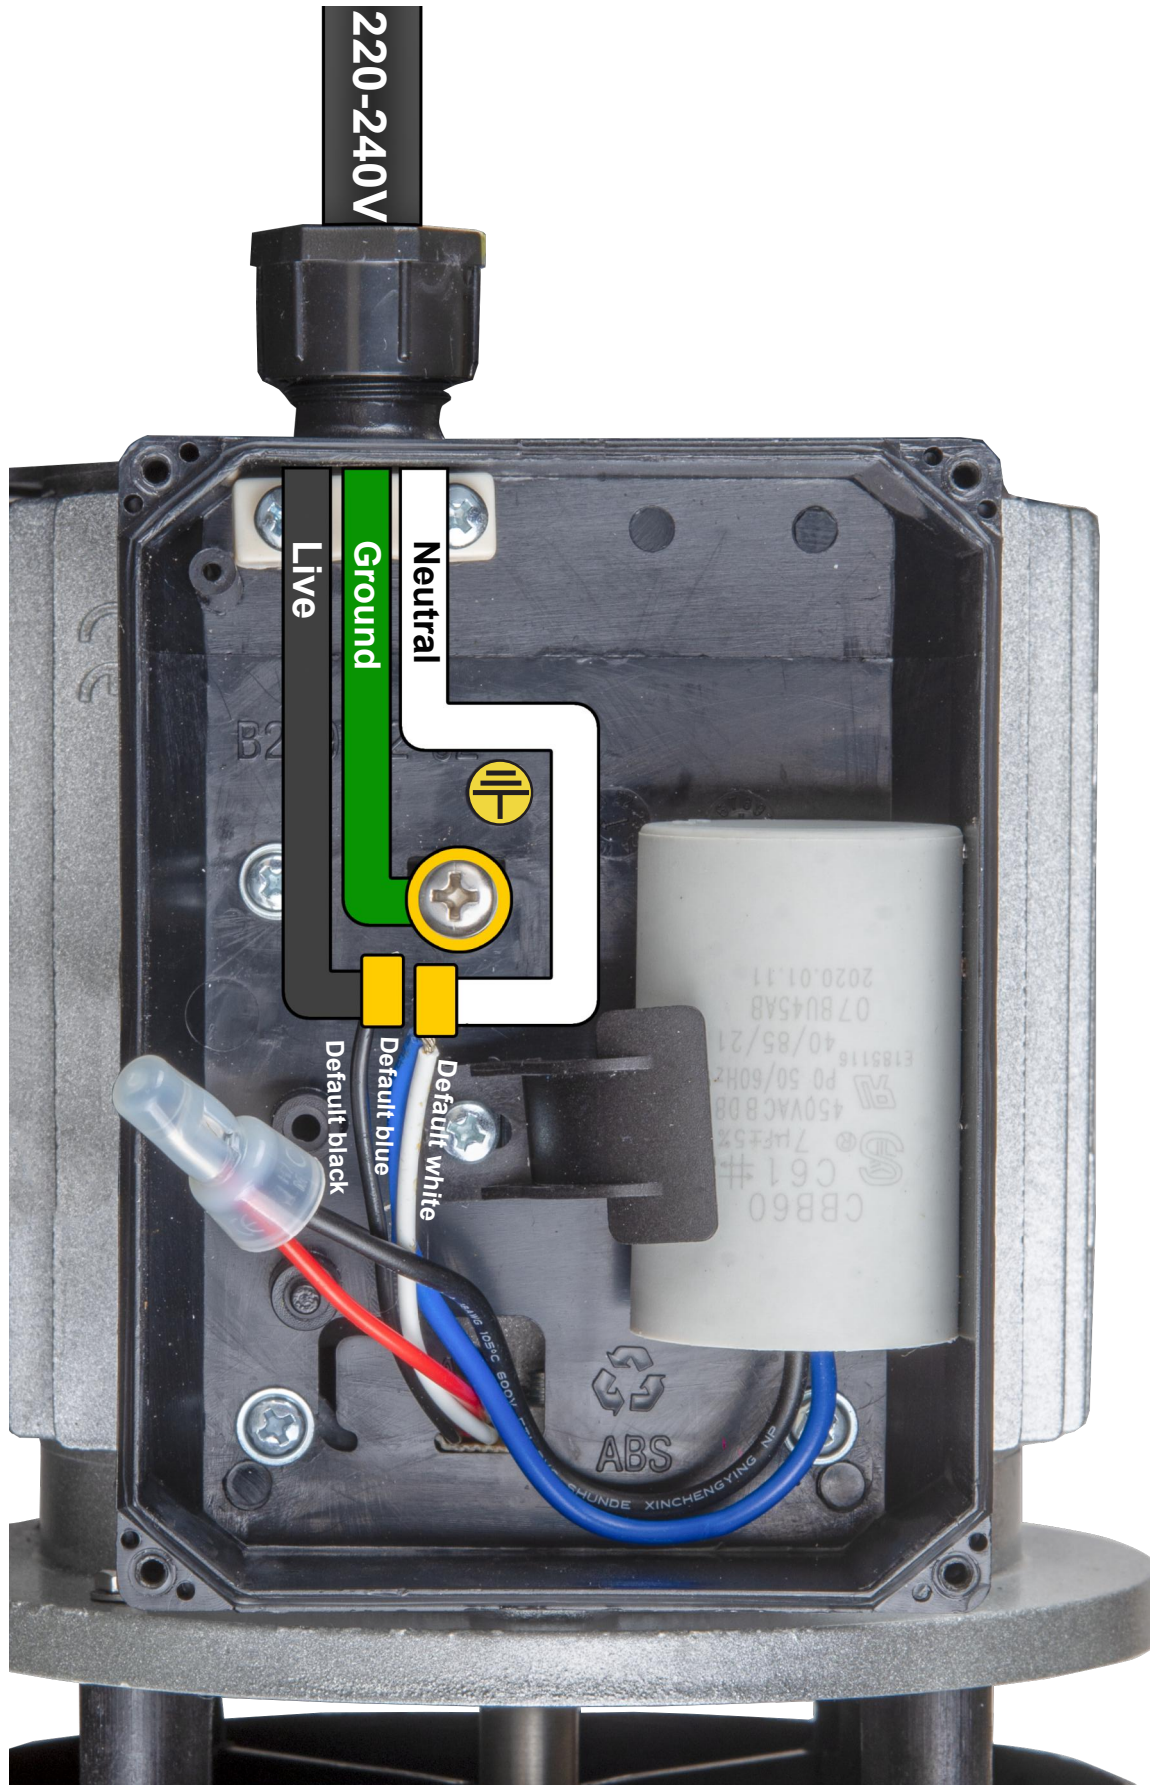


VOLTAGE(220V-240V/60HZ, DEFAULT):

1. Turn off the power first.
2. Ensure the corresponding voltage of the circuit (220V-240V/60HZ).
3. Black wire(Live wire): connect to default black wire.
4. White wire(Neutral wire): connect to default blue wire and default white wire.
5. Green wire(Ground wire): connect to terminal Ground .

Rotate the position of Wet-end

1. Turn off the power first.
2. Loosen 4 bolts at the motor (Pic 1) and pull those 4 bolts out.
3. Then, rotate carefully the wet-end to 3:00 (Pic 2) Or 9:00 position (Pic 3).
4. Push those 4 bolts back to match the screw holes at the wet-end. Then, tighten those 4 bolts into the wet-end (Pic 4).

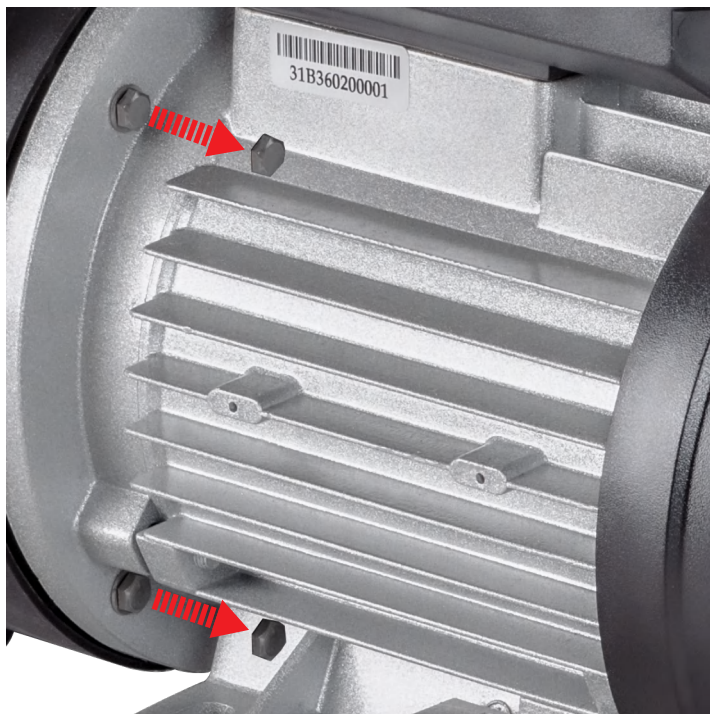


(Other two bolts at another side of the motor.)

Pic 1




3:00 Position

Pic 2

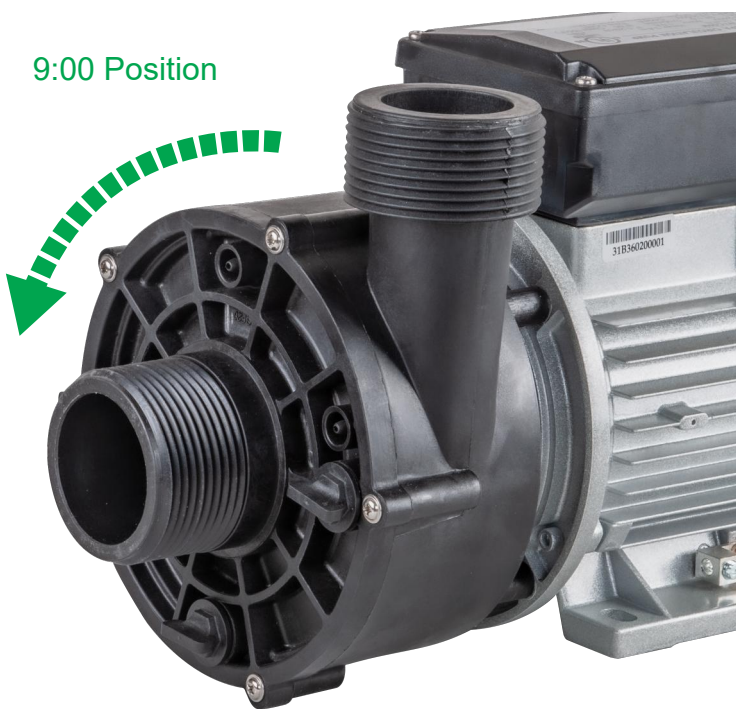

9:00 Position

Pic 3

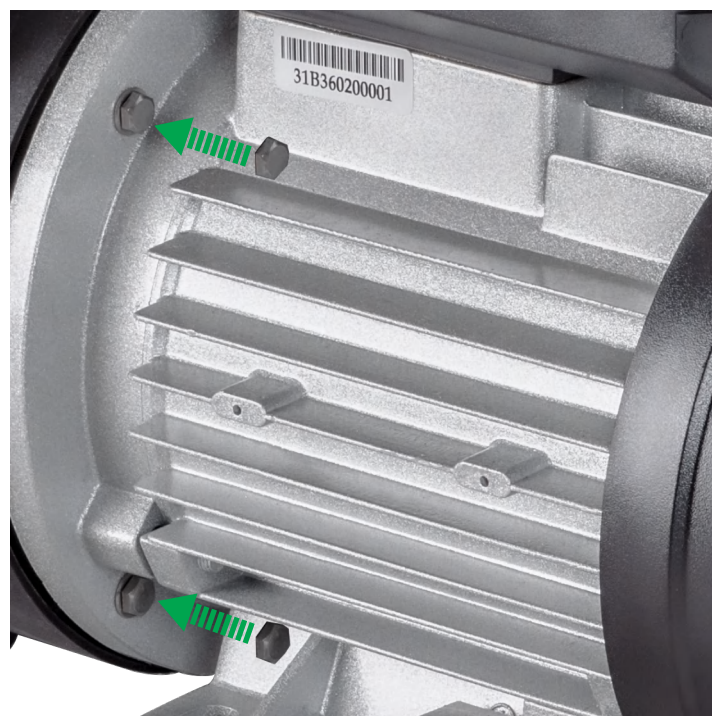

Pic 4